


Wiring diagram for Yamaha XS360 - 2D model

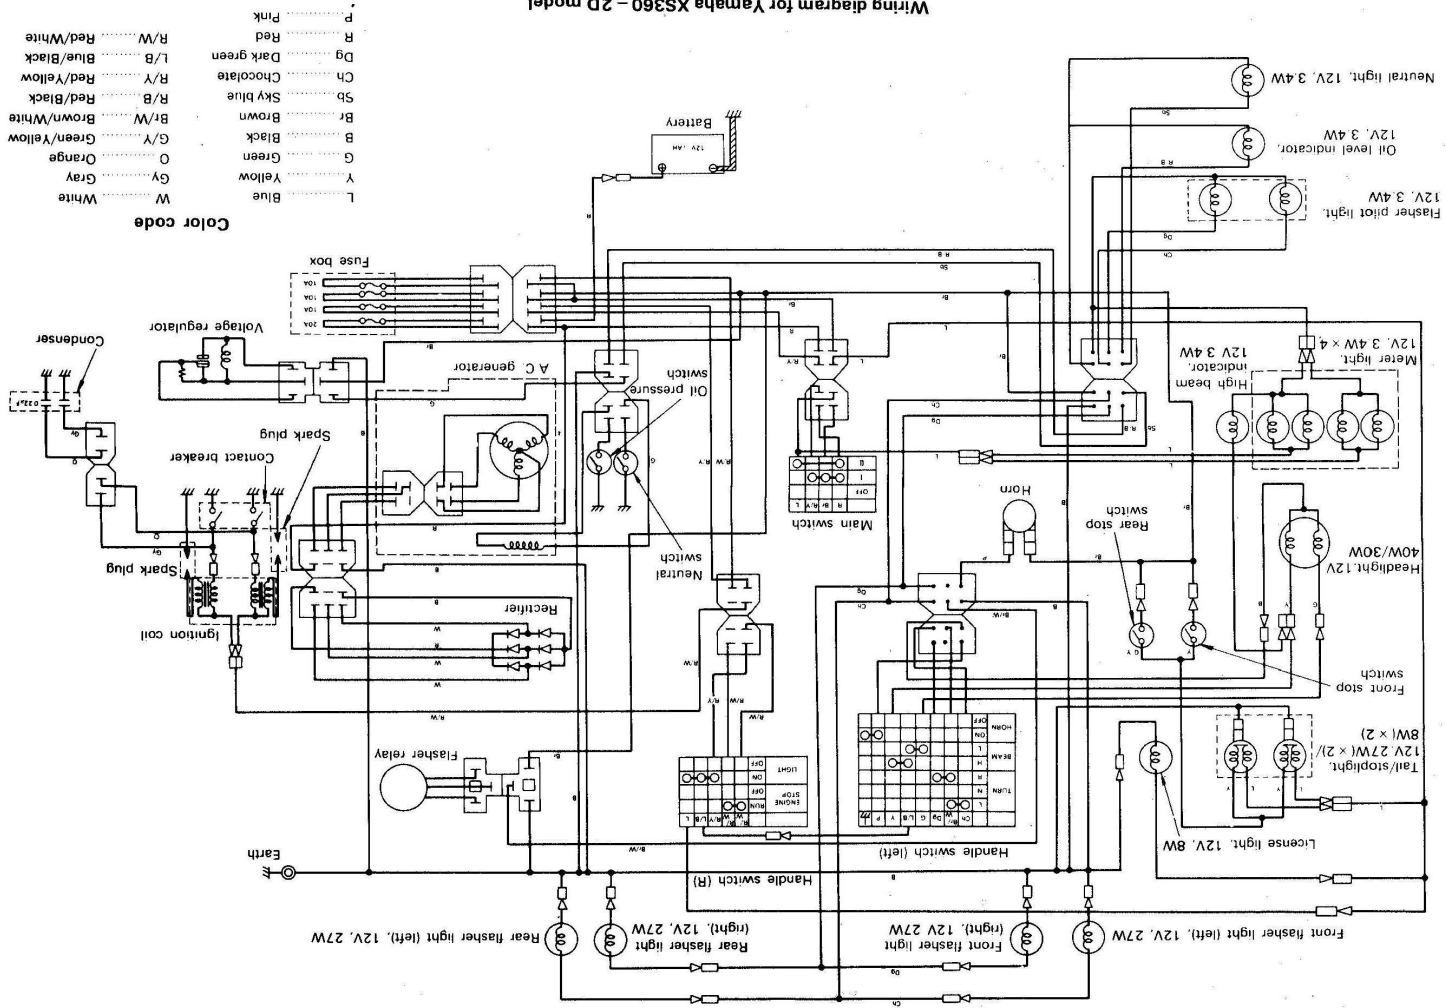

## Metric conversion tables

Inches	Decimals	Millimetres	Millimetres to Inches		Inches to Millimetres	
			mm	Inches	Inches	mm
1/64	0.015625	0.3969	0.01	0.00039	0.001	0.0254
1/32	0.03125	0.7937	0.02	0.00079	0.002	0.0508
3/64	0.046875	1.1906	0.03	0.00118	0.003	0.0762
1/16	0.0625	1.5875	0.04	0.00157	0.004	0.1016
5/64	0.078125	1.9844	0.05	0.00197	0.005	0.1270
3/32	0.09375	2.3812	0.06	0.00236	0.006	0.1524
7/64	0.109375	2.7781	0.07	0.00276	0.007	0.1778
1/8	0.125	3.1750	0.08	0.00315	0.008	0.2032
9/64	0.140625	3.5719	0.09	0.00354	0.009	0.2286
5/32	0.15625	3.9687	0.1	0.00394	0.01	0.254
11/64	0.171875	4.3656	0.2	0.00787	0.02	0.508
3/16	0.1875	4.7625	0.3	0.01181	0.03	0.762
13/64	0.203125	5.1594	0.4	0.01575	0.04	1.016
7/32	0.21875	5.5562	0.5	0.01969	0.05	1.270
15/64	0.234375	5.9531	0.6	0.02362	0.06	1.524
1/4	0.25	6.3500	0.7	0.02756	0.07	1.778
17/64	0.265625	6.7469	0.8	0.03150	0.08	2.032
9/32	0.28125	7.1437	0.9	0.03543	0.09	2.286
19/64	0.296875	7.5406	1	0.03937	0.1	2.54
5/16	0.3125	7.9375	2	0.07874	0.2	5.08
21/64	0.328125	8.3344	3	0.11811	0.3	7.62
11/32	0.34375	8.7312	4	0.15748	0.4	10.16
23/64	0.359375	9.1281	5	0.19685	0.5	12.70
3/8	0.375	9.5250	6	0.23622	0.6	15.24
25/64	0.390625	9.9219	7	0.27559	0.7	17.78
13/32	0.40625	10.3187	8	0.31496	0.8	20.32
27/64	0.421875	10.7156	9	0.35433	0.9	22.86
7/16	0.4375	11.1125	10	0.39370	1	25.4
29/64	0.453125	11.5094	11	0.43307	2	50.8
15/32	0.46875	11.9062	12	0.47244	3	76.2
31/64	0.48375	12.3031	13	0.51181	4	101.6
1/2	0.5	12.7000	14	0.55118	5	127.0
33/64	0.515625	13.0969	15	0.59055	6	152.4
17/32	0.53125	13.4937	16	0.62992	7	177.8
35/64	0.546875	13.8906	17	0.66929	8	203.2
9/16	0.5625	14.2875	18	0.70866	9	228.6
37/64	0.578125	14.6844	19	0.74803	10	254.0
19/32	0.59375	15.0812	20	0.78740	11	279.4
39/64	0.609375	15.4781	21	0.82677	12	304.8
5/8	0.625	15.8750	22	0.86614	13	330.2
41/64	0.640625	16.2719	23	0.90551	14	355.6
21/32	0.65625	16.6687	24	0.94488	15	381.0
43/64	0.671875	17.0656	25	0.98425	16	406.4
11/16	0.6875	17.4625	26	1.02362	17	431.8
45/64	0.703125	17.8594	27	1.06299	18	457.2
23/32	0.71875	18.2562	28	1.10236	19	482.6
47/64	0.734375	18.6531	29	1.14173	20	508.0
3/4	0.75	19.0500	30	1.18110	21	533.4
49/64	0.765625	19.4469	31	1.22047	22	558.8
25/32	0.78125	19.8437	32	1.25984	23	584.2
51/64	0.796875	20.2406	33	1.29921	24	609.6
13/16	0.8125	20.6375	34	1.33858	25	635.0
53/64	0.828125	21.0344	35	1.37795	26	660.4
27/32	0.84375	21.4312	36	1.41732	27	685.8
55/64	0.859375	21.8281	37	1.45667	28	711.2
7/8	0.875	22.2250	38	1.4961	29	736.6
57/64	0.890625	22.6219	39	1.5354	30	762.0
29/32	0.90625	23.0187	40	1.5748	31	787.4
59/64	0.921875	23.4156	41	1.6142	32	812.8
15/16	0.9375	23.8125	42	1.6535	33	838.2
61/64	0.953125	24.2094	43	1.6929	34	863.6
31/32	0.96875	24.6062	44	1.7323	35	889.0
63/64	0.984375	25.0031	45	1.7717	36	914.4

1 Imperial gallon = 8 Imp pints = 1.16 US gallons = 277.42 cu in = 4.5459 litres

1 US gallon = 4 US quarts = 0.862 Imp gallon = 231 cu in = 3.785 litres

1 Litre = 0.2199 Imp gallon = 0.2642 US gallon = 61.0253 cu in = 1000 cc

## Miles to Kilometres

1	1.61
2	3.22
3	4.83
4	6.44
5	8.05
6	9.66
7	11.27
8	12.88
9	14.48
10	16.09
20	32.19
30	48.28
40	64.37
50	80.47
60	96.56
70	112.65
80	128.75
90	144.84
100	160.93

## Kilometres to Miles

1	0.62
2	1.24
3	1.86
4	2.49
5	3.11
6	3.73
7	4.35
8	4.97
9	5.59
10	6.21
20	12.43
30	18.64
40	24.85
50	31.07
60	37.28
70	43.50
80	49.71
90	55.92
100	62.14

## lb f ft to Kg f m

1	0.138
2	0.276
3	0.414
4	0.553
5	0.691
6	0.829
7	0.967
8	1.106
9	1.244
10	1.382
20	2.765
30	4.147

## Kg f m to lb f ft

1	7.233
2	14.466
3	21.699
4	28.932
5	36.165
6	43.398
7	50.631
8	57.864
9	65.097
10	72.330
20	144.660
30	216.990

lb f/in<sup>2</sup> : Kg f/cm<sup>2</sup>

1	0.07
2	0.14
3	0.21
4	0.28
5	0.35
6	0.42
7	0.49
8	0.56
9	0.63
10	0.70
20	1.41
30	2.11

Kg f/cm<sup>2</sup> : lb f/in<sup>2</sup>

1	14.22
2	28.50
3	42.67
4	56.89
5	71.12
6	85.34
7	99.56
8	113.79
9	128.00
10	142.23
20	284.47
30	426.70

# Index

## A

Acknowledgements 2  
About this manual 2  
Adjustments:  
  Carburettors – float level 65  
  Clutch and cable 13  
  Contact breaker 11–73  
  Front brake 10, 97  
  General maintenance 13  
  Headlamp beam height  
  Rear brake and pedal height 10  
  Rear chain 9  
  Steering head 13  
  Tappet clearance 54  
  Tickover speed 12  
  Valve clearance 12

Air filter 64  
Alternator 109  
Automatic timing unit 23, 53

## B

Battery charging procedure 110  
Balancing front wheel 106  
Bearings:  
  Big-end 29  
  Main 29  
  Steering head 13–83  
  Swinging arm 13  
  Wheel 97  
Bleeding – hydraulic brake system 102  
Brakes:  
  Front      Disc 93, 97  
             Drum 97  
  Rear      Disc 100  
             Drum 100  
Bulbs – replacement:  
  Flasher 113  
  Headlamp 110  
  Speedometer & tachometer 117  
  Stop and tail 113  
  Warning lamp console 117

Buying:  
  Spare parts 6  
  Tools 15

## C

Carburettors:  
  Adjustment – float level 65  
  Dismantling and reassembly 60  
  Fault diagnosis 72  
  Removal 60  
  Settings 65  
  Specification 58  
  Synchronisation 65

Camshaft, sprocket, chain & tensioner 33  
Cables:  
  Clutch 13  
  Lubrication 9  
  Speedometer and tachometer 89, 90  
  Throttle 65

Chapter contents:  
  1 Engine, clutch and gearbox 16  
  2 Fuel system and lubrication 58  
  3 Ignition system 73  
  4 Frame and forks 80  
  5 Wheels, brakes and tyres 91  
  6 Electrical system 108

Checks:  
  Charging system – output 73  
  Coil 77  
  Contact breaker points 11  
  Engine/gearbox oil levels 8  
  Ignition timing 11, 75  
  Legal 9  
  Safety 9  
  Spark plug – gap setting 11  
  Tyre pressures 8–91  
  Valve clearance 12  
  Wheel spokes 11

Centre stand 89

Cleaning:  
  Air filters 11–66  
  Contact breaker 11  
  The machine 90

Clutch:  
  Adjustment 13  
  Cable 13  
  Drag 57  
  Examination and renovation 35  
  Fault diagnosis 57  
  Removal 27  
  Replacing 42  
  Slip 57  
  Specification 17

Chain – final drive 104  
Coil – ignition 77  
Condenser 77

Connecting rod 32  
Contact breaker 23

Crankcase halves:  
  Separating 29  
  Joining 41

Crankshaft 31  
Cush drive – rear wheel 102  
Cylinder block 24, 32  
Cylinder head 24, 32

- D**
- Decarbonising 32
  - Description – general:
    - Electric system 109
    - Engine, clutch & gearbox 18
    - Frame & forks 80
    - Fuel system 58
    - Ignition system 73
    - Wheels, brakes & tyres 91
  - Dimensions and weights 6
  - Dust caps – tyre valve 106
  - Dualseat – removal 89
- E**
- Electrical system:
    - Alternator 109
    - Battery 110
    - Fault diagnosis 118
    - Fuse location 110
    - Headlamp 110
    - Horn 117
    - Lamps 110, 113
    - Silicon rectifier 109
    - Specifications 108
    - Starter motor 114
    - Switches – handlebar 113
    - Switch – solenoid 115
    - Voltage regulator 110
    - Wiring diagrams 119–120
    - Wiring layout examination 117
  - Engine:
    - Camshaft, sprocket, chain and tensioner 33
    - Camshaft cover 24
    - Clutch – removal 27
    - Connecting rods 32
    - Crankshaft – examination 31
    - Crankcase halves:
      - Separating 29
      - Joining 41
    - Cylinder block and pistons – removal 24
    - Cylinder head 24, 32
    - Decarbonising 32
    - Dismantling – general 23
    - Examination and renovation – general 29
    - Fault diagnosis 56–57
    - Lubrication system 18–58
    - Oil pump:
      - Removal 27–69
      - Replacement 46–69
    - Pistons and rings 32, 48
    - Reassembly – general
    - Refitting in frame 54
    - Removal from frame 54
    - Rocker arms and pins 33
    - Specifications 16–17
    - Starting and running a rebuilt unit 56
    - Tappet adjustment 54
    - Torque wrench settings 18
    - Valve grinding and renovation 33
- F**
- Fault diagnosis:
    - Clutch 56
    - Electrical system 118
    - Engine 56–57
    - Frame and forks 90
    - Fuel system 72
    - Gearbox 56
    - Ignition system 79
    - Lubrication system 72
    - Wheels, brakes and tyres 107
- Filters:**
- Air 66
  - Oil 33
- Final drive chain 104**
- Foot rests 89**
- Frame and forks:**
- Centre stand 89
  - Dualseat – removal 89
  - Fault diagnosis 90
  - Foot rests 89
  - Frame examination and repair 85
- Front forks:**
- Dismantling 82
  - Examination and renovation 82
  - Removal 80
  - Replacement 85
- Prop stand 89**
- Rear brake pedal 89**
- Rear suspension unit 89**
- Steering head bearings 82**
- Swinging arm rear fork 87**
- Front wheel 91, 92**
- Fuel system:**
- Carburettors:
    - Adjustment 65
    - Dismantling and reassembly 60
    - Float level adjustment 65
    - Synchronisation 65
    - Settings 65
  - Air filter 66
  - Fault diagnosis 72
  - Petrol tank 59
  - Petrol tap 59
  - Fuse location 110
- G**
- Gearbox:
    - Components – examination and renovation 35
    - Dismantling 23
    - Fault diagnosis 56
    - Gear change mechanism 42
    - Lubrication 58
    - Reassembly 38
    - Selector mechanism:
      - Removal 29
      - Replacement 38
    - Specifications 18
  - Generator (Alternator) 109
  - Gudgeon pins 48
- H**
- Handlebar switches 113
  - Headlamp – beam height adjustment 111
  - Horn 117
  - Hydraulic brake system – bleeding 102
- I**
- Ignition system:
    - A.T.U. 77
    - Coils – checking 77
    - Condensor 77
    - Contact breaker 73
    - Fault diagnosis 79
    - Charging system 73
    - Spark plugs:
      - Checking and setting gap 78
      - Colour chart:
        - operating conditions 75
    - Specifications 73
    - Switch 117
    - Timing 11–74

- K**
- Kickstart:
    - Removal 27
    - Replacement 36
- L**
- Lamps 71, 110, 113
  - Legal obligations 9, 105, 111
  - Lighting and ignition switch 117
  - Lubrication system 18, 58
  - Lubrication:
    - Cables 9
    - General 11
    - Rear chain 9, 104
    - Steering head 13
    - Wheel bearings 13
  - Lubricants – recommended 14
- M**
- Maintenance, adjustment and capacity data 14
  - Master cylinders 95–101
  - Maintenance – routine 8–13
  - Metric conversion tables 121, 122
- N**
- Neutral switch 26
- O**
- Oil filter 71
  - Oil pressure warning lamp 71
  - Oil pump 69
  - Ordering:
    - Spare parts 6
    - Tools 15
- P**
- Pedal – rear brake 89
  - Petrol tank 59
  - Petrol tap 59
  - Pistons and rings 32, 48
  - Prop stand 89
- R**
- Rear chain – lubrication and adjustment 9
  - Rear suspension unit 89
  - Rear wheel 98–99
  - Rear wheel:
    - Cush drive 102
    - Sprocket 102
  - Rectifier unit 109
  - Recommended lubricants 14
  - Rings and pistons 32
  - Routine maintenance 8–13
- S**
- Safety check 9
  - Selector mechanism:
    - Removal 29
    - Replacement 38
  - Spark plugs:
    - Checking and setting gaps 78
    - Colour chart – operating conditions 75
- Specifications:**
- Bulbs 108
  - Clutch 17
  - Electrical system 108
  - Engine 16–17
  - Frame and forks 80
  - Fuel system 58
  - Gearbox 18
  - Ignition 75
  - Lubrication 58
  - Wheels brakes and tyres 91
- Speedometer head and drive 89–90**
- Statutory requirements 9, 105, 111**
- Starter motor 115**
- Steering head yokes and bearings 82**
- Suspension unit – rear 89**
- Swinging arm fork 87**
- Switches:**
- Handlebar – function and replacement 113
  - Lighting and ignition 117
  - Neutral 26
  - Oil pressure warning 46
  - Starter motor – solenoid 115
  - Stop lamp 117
- T**
- Tachometer head and drive 89, 90
- Testing:**
- Charging system 73
  - Condenser 77
  - Electrical system 109
  - Silicon rectifier 109
  - Timing ignition 11, 75
  - Voltage regulator 110
- Tools 15**
- Tyres:**
- Pressures 8, 91
  - Removal and replacement 104, 105
  - (Colour instructions) 103
  - Valves and dust caps 106
- V**
- Valves:
    - Clearances 12
    - Grinding 33
    - Spring, seats and collets 33
  - Voltage regulator 110
- W**
- Weights and dimensions 6
  - Wheels:
    - Alignment 105
    - Balancing front wheel 106
    - Bearings 97
    - Front 91, 92
    - Rear 98, 99
    - Spoke conditions 11
  - Wiring diagrams 119, 120
  - Wiring layout and examination 117
  - Working conditions and tools 15